Steve's Aircraft S.A. Gascolator Document No.3200-3-2

Dated November 7, 2001 I.R.

Rev. 1, dated 7-29-03

## Installation Instructions for S/A Gascolator in General

1. Turn off fuel

- 2. Remove Cowl to access gascolator
- 3. Drain original gascolator and remove.
- 4. Remove fittings from original and install them in new S/A Gascolator paying attention to orientation. Use a fuel resistant sealant on threads.
- 5. Install the SA3-00 Gascolator (optional SA3-00-A if over 60 gallon main tank capacity) using the same method as original being replaced.
- 6. On installations with bail wire assemblies retaining cover through bracket (Piper P/N 71991-00 for example) modify the bracket by drilling the original bail holes to 3/16 diameter. Remove bowl from S/A Gascolator and install the cover into bracket and mark location of security hole in cover on bracket, remove and file notch in bracket for clearance. See drawings #001A and #001B. Reinstall cover into bracket securing with (2) 10-32 screws.
- 7. Reinstall fuel lines.
- 8. Reinstall bowl and safety with 3/32 x 1.25 cotter pin or .032 min. safety wire through gascolator locking hole to the mount bracket.
- 9. Turn on fuel and check for leaks.
- 10. Reinstall cowling.
- 11. Log installation in logs and 337.
- 12. Refer to Instructions for Continued Airworthiness for maintenance
- 13. No basic weight change

## Supplemental installation for Piper series with gascolator under right seat

- 1. Drain right fuel tank with recommended precautions.
- 2. Remove right seat.
- 3. Remove original gasolator and fittings.
- 4. Reinstall fittings into new S/A gascolator.
- 5. Remove bowl, install cover into floorboard hole, secure fuel lines to fittings and secure cover with aluminum angles made per drawing #001C Secure the angles by drilling (2) each holes through floorboard and securing with #8 rivnuts and #8 screws. Secure gascolator with (2) 10x32 screws through angles into 10x32 holes in cover. A hole through the floorboard will be required for the safety device to pass through. Install bowl and safety.
- 6. Fuel system and check for leaks.
- 7. Reinstall right seat